User manual for how to edit the inner SD card

How to edit the inner SD card, mainly three steps.
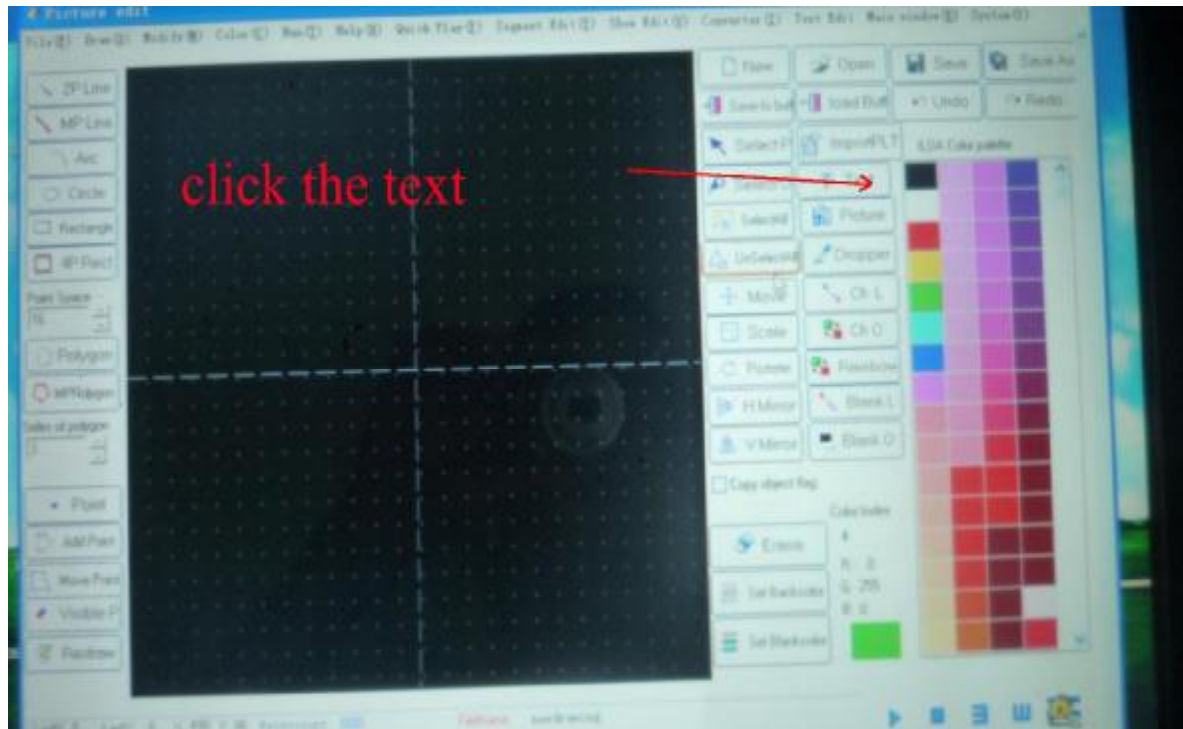
1>   edit the picture or text.

2>   change the gpg format picture to ILDA fromat.

3>   save the ILDA format to SD card.

4>   play the pictures saved in the SD card.

First insert the SD card to PC, open the file, extract the installation package, and instal Ishow software.
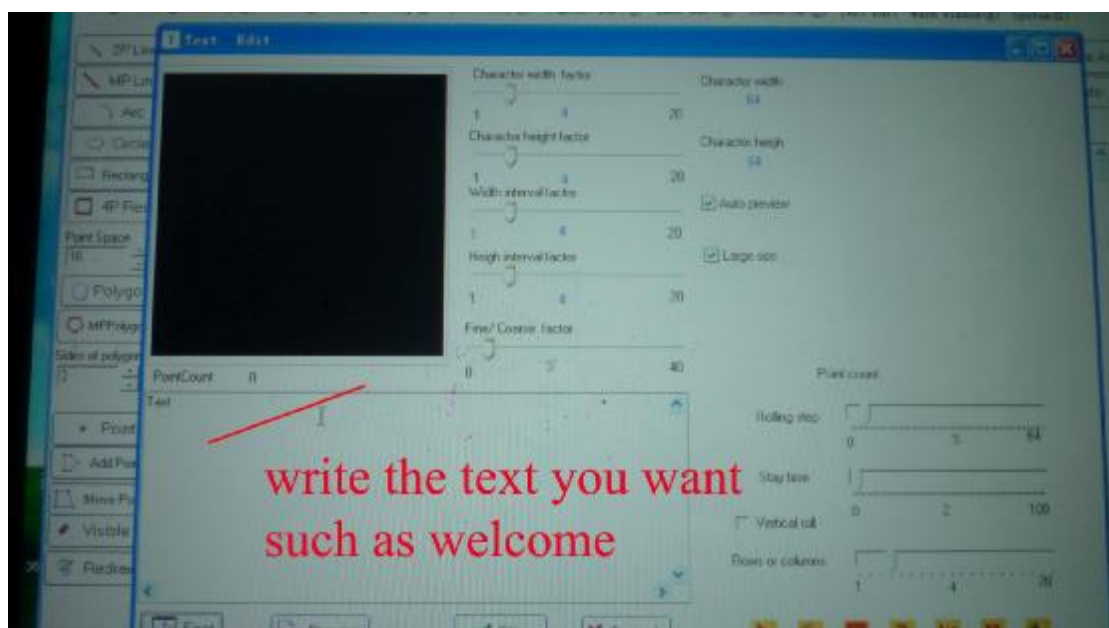
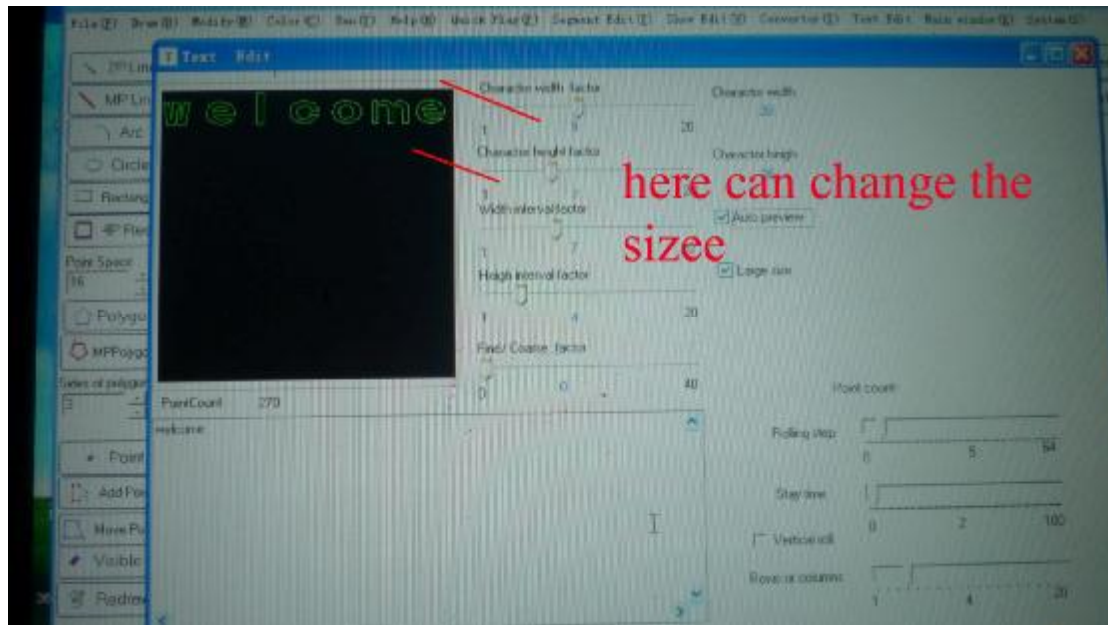Then open the software Ishow,click the picture edit.
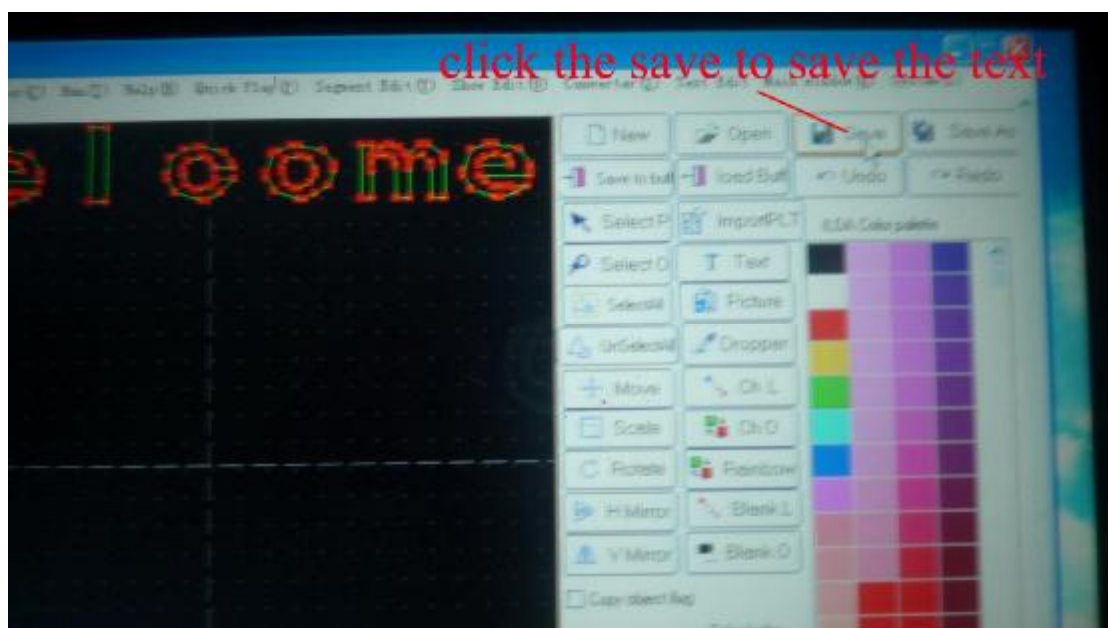
Click the text to edit text.
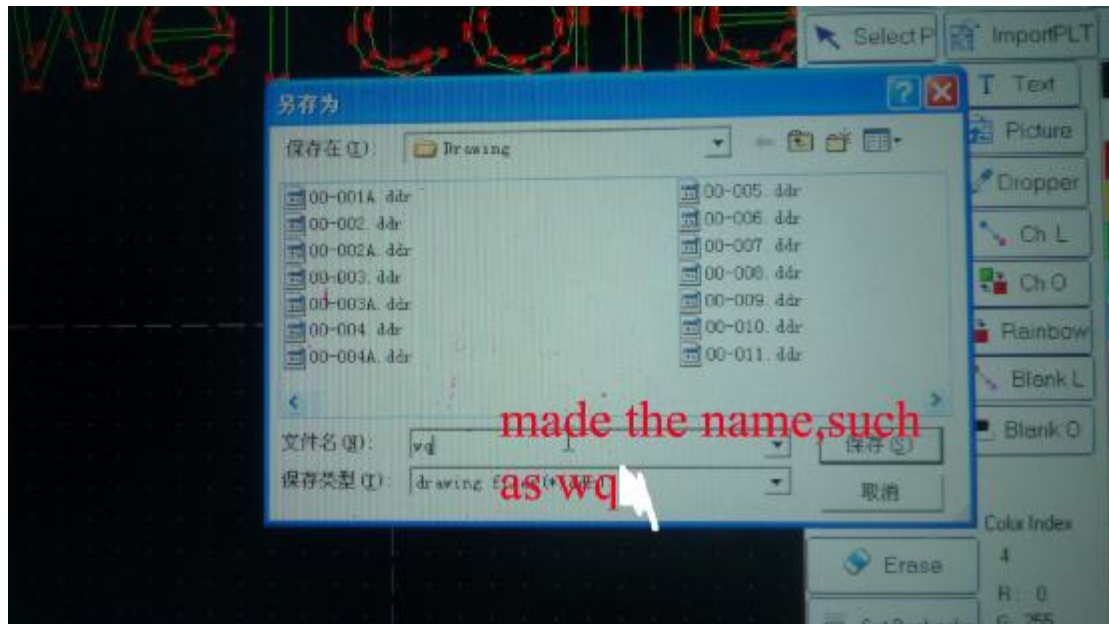

Write down the text in the square.

The text can preview, and in the right, can change the size and so on..One time up to seven lettes,otherwise can't display completely.

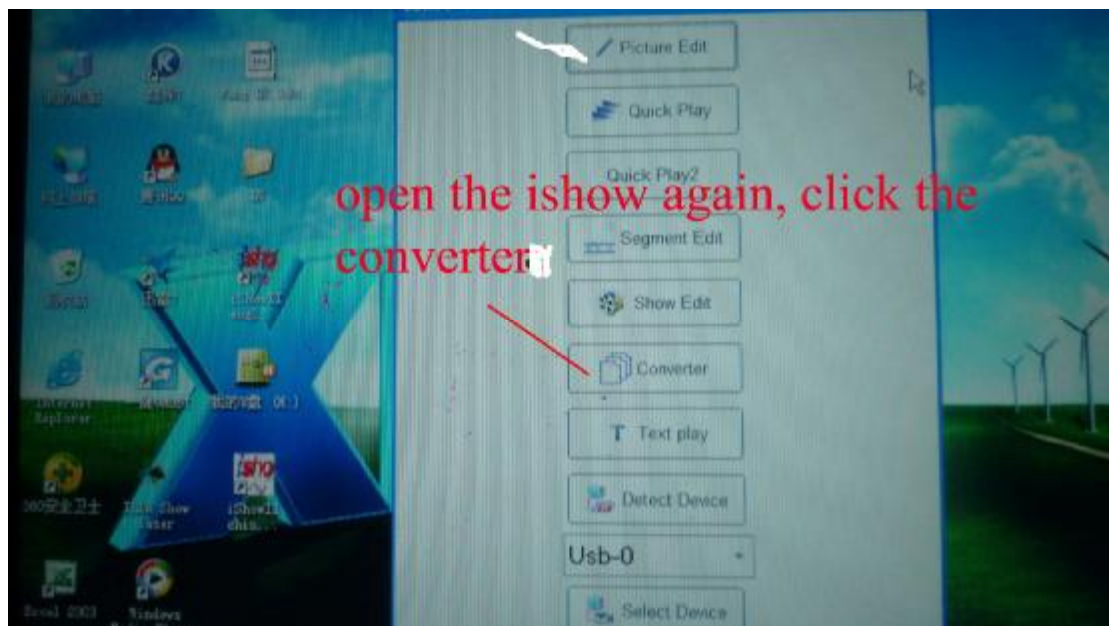After editing, click the save to save the text.
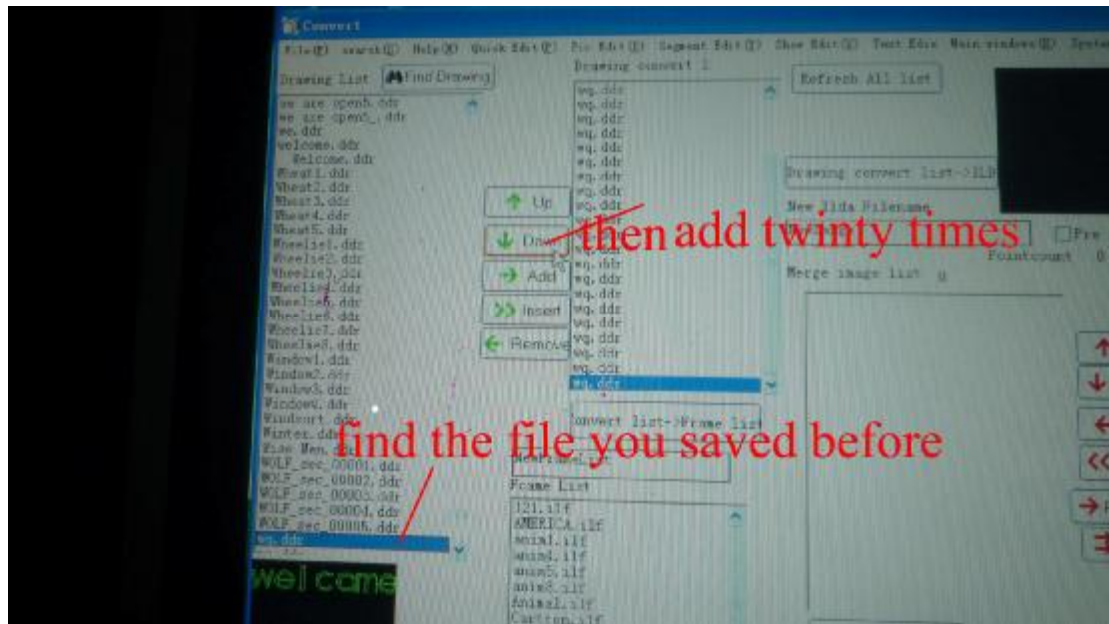
Make a name,such as "wq"

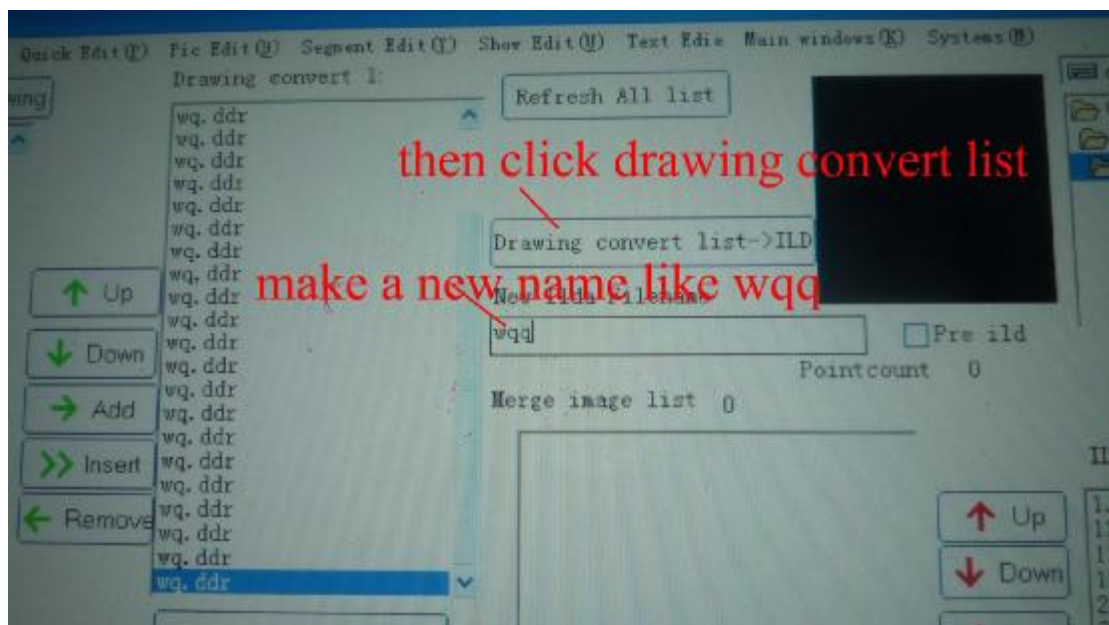This step is to change the picutre format to ILDA.

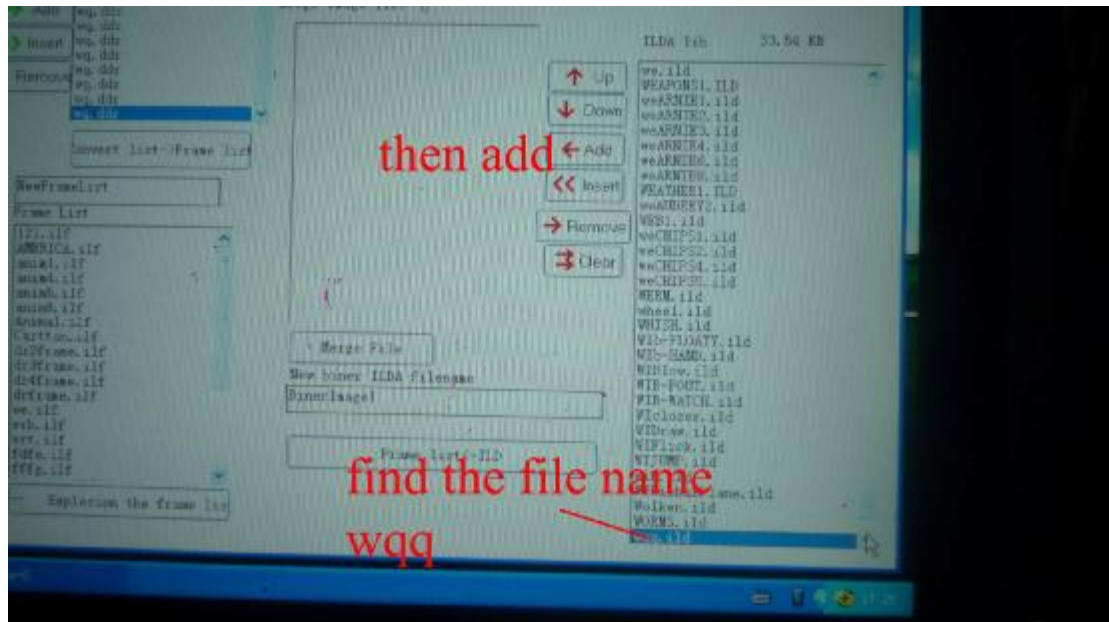Open the ishow software again, click the converter.

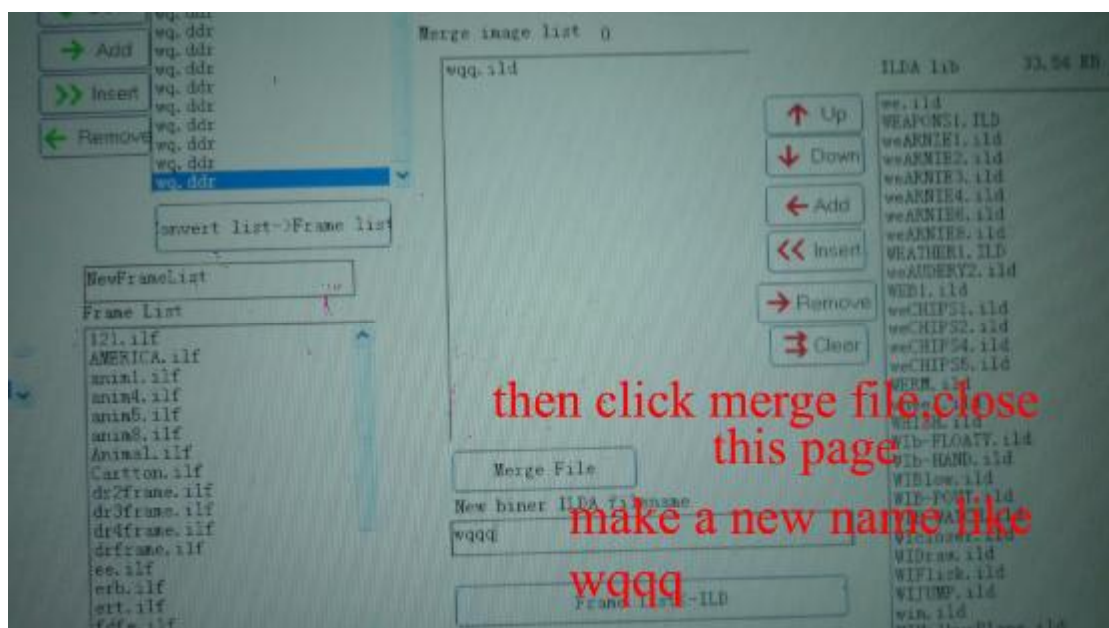Use find drawing to find the file wq, then click add twinty times.

Make a new name, then click drawing convert list.
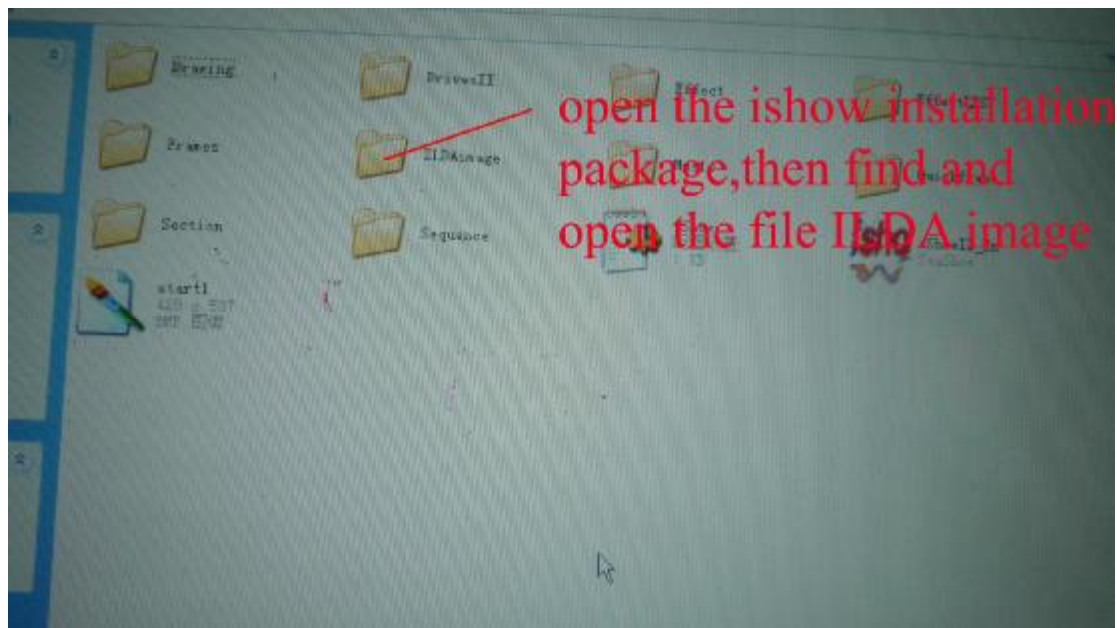
Find the file name wqq, then add one time.

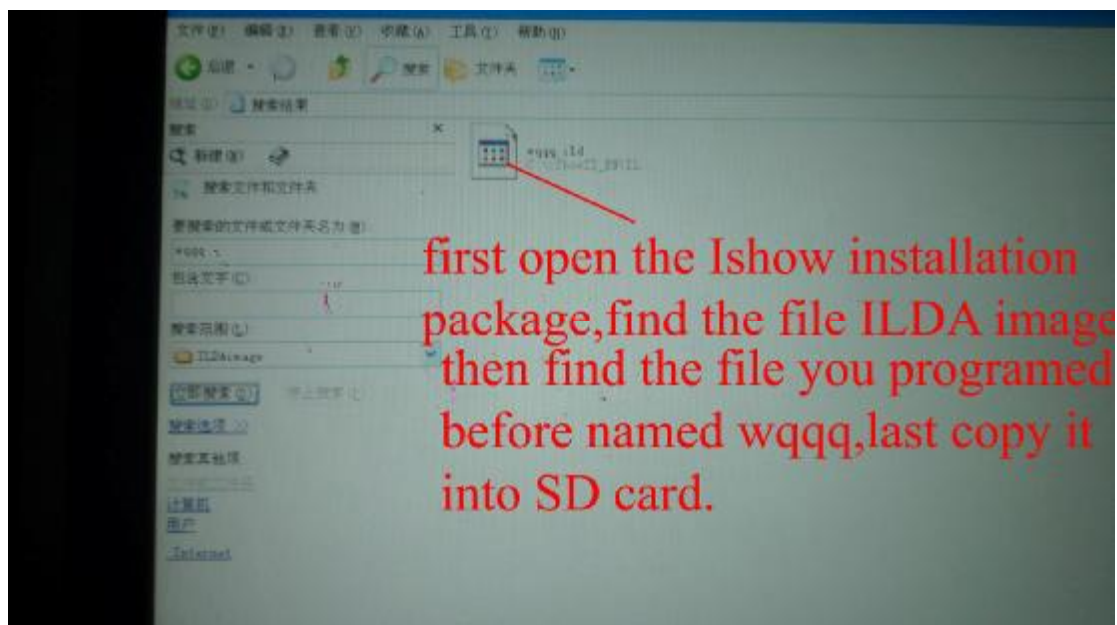Make a new name like wqqq, then click merge file, close this page, finish convert.

This step is to copy the file into SD card.

Open the ishow installation package, then find the file ILDA image.

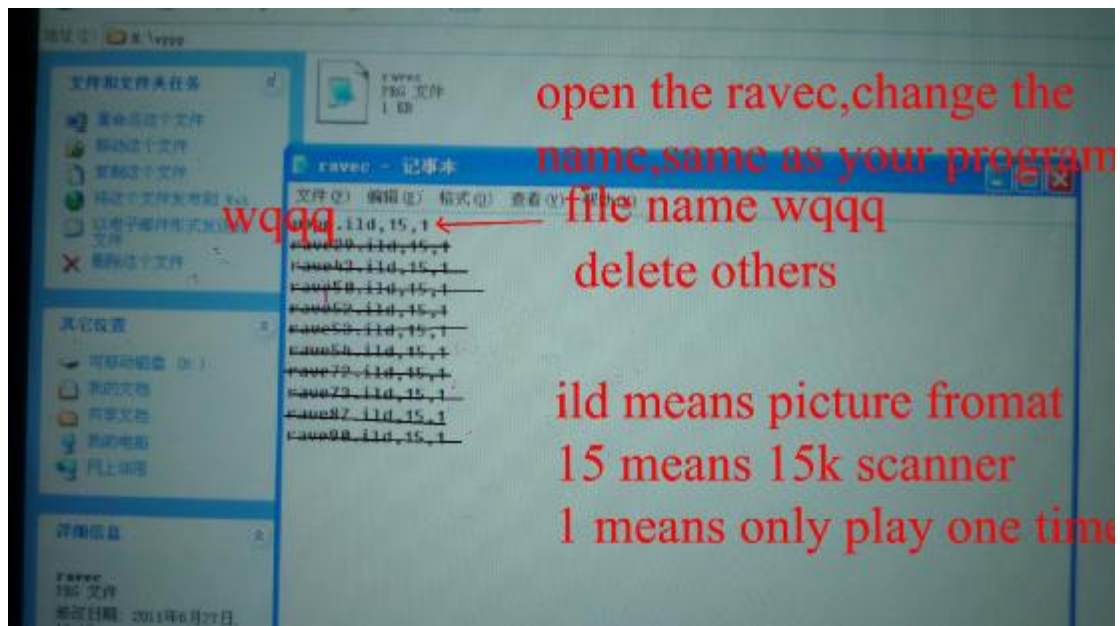Then find the file wqqq, last copy it into SD card.

Make a new file wqqq, put the copy(last step) into this file.

make a new file named as wqqq,put the copy(last step) into the file.

Open another file already in the ILDA image, find the root file ravec, then also copy it into the new file wqqq.

first open one root file rave,then copy this file ravec into the new file wqqq.

Open the ravec, change the name, same as your programmed file name wqqq, delete others.Finished the copy.

Last is to paly this new file name wqqq.

Insert the SD card to laser machine, chose the mode ILDA, find the name wqqq, it can play the text"welcome".